



DryVap® Evaporator Spare Parts

To keep the extractor in good working conditions, the following items should be checked and replaced per the recommended frequency below.

Ref	Part #	Quantity for extractor	Description	Frequency
1	02-1848-PL	6	Sparge Tube	Inspect every 12 months, replace if worn or damaged
2	02-1893-PL	6	Rinse Hook	Inspect every 12 months, replace if worn or damaged
3	22-2204	12	Headless Nut (Used on the Sparge Valve)	Inspect every 6 months, replace if worn or damaged
4	22-2205	12	Ferrule and Compression Fitting (Used on the Sparge Valve)	Inspect every 6 months, replace if worn or damaged
5	22-0888	6	Luer Fitting (On Top of the Sparge Valve)	Inspect every 6 months, replace if worn or damaged
6	35-1901	6	Seal (Orange Gasket)	Inspect every 6 months, replace if worn or damaged
7	35-1902	6	Seal Jacket	Inspect every 6 months, replace if worn or damaged
8	35-1926-01	6	"O" Ring for the Heater	Inspect every 6 months, replace if worn or damaged
9	50-2052-02	6	Cradle	Inspect every 6 months, replace if worn or damaged
10	50-2501	6	Sparge Valve Replacement Kit	Inspect every 6 months, replace if worn or damaged
11	50-2754	6	Use this Heater - if the Serial Number of the DryVap is below 1106	Inspect every 6 months, replace if worn or damaged
12	50-1658-01	6	Use this Heater - if the Serial Number of the DryVap is 1106 or above	Inspect every 6 months, replace if worn or damaged
13	50-0914	6	DryDisk Assembly	Inspect every 3 months, replace if worn or damaged
14	50-0910	1	Gas Input Line (Nitrogen Line)	Inspect every 12 months, replace if worn or damaged
15	50-0911	1	Rinse Line (Rinse Solvent)	Inspect every 6 months, replace if worn or damaged
16	50-0912-02	1	Eight-Foot Vacuum Line	Inspect every 12 months, replace if worn or damaged



DryVap® Evaporator Spare Parts

Continued

Ref	Part #	Quantity for extractor	Description	Frequency
17	30-1894	1	"O" Ring for the Liquid Trap Manifold	Inspect every 6 months, replace if worn or damaged
18	03-1588-01	6	DryVap Evaporation Tube - 1.0 mL	Inspect every 3 months, replace if worn or damaged
19	03-1588-02	6	DryVap Evaporation Tube - 0.5 mL	Inspect every 3 months, replace if worn or damaged
20	03-1588-03	6	DryVap Evaporation Tube - Solid Tip	Inspect every 3 months, replace if worn or damaged
21	03-1588-04	6	DryVap Evaporation Tube - 0.9 mL Optical Endpoint	Inspect every 3 months, replace if worn or damaged
22	03-1588-05	6	DryVap Evaporation Tube - 0.4 mL Optical Endpoint	Inspect every 3 months, replace if worn or damaged
	03-1588-06	6	DryVap Evaporation Tube - For GC Vial	Inspect every 3 months, replace if worn or damaged